

## DXB-8 Button Cap Selection Sheet

	A	B	C	D	E	F	G	H	J	K
0	0	1	2	3	4	5	6	7	8	9
1	TV	TV1	TV2	HDMI	HDMI1	HDMI2	DVD	VIDEO	SAT	CBL
2	AUX	AUX1	AUX2	PROJ	PROJ1	PROJ2	DOC	PC	PC1	PC2
3	YPbPr	VCR	VTC	VGA	VGA1	VGA2	SCRN UP	SCRN DN	*	#
4	■	▶	⏸	⏩	⏪	▲	ENTER	MENU	INPUT	EXIT
5	⏻	ON	OFF	🔊	🔊	🔇	🔇	.	●	●

### Notes:

A blank (non-etched) button is also available. Please order DXB-CB-W for white, DXB-CB-B for black.

Buttons can be reversed 180°.

- Button 4B is used for Play, Left, and Right
- Button 4D is used for Fast Forward and Rewind
- Button 4E is used for Next and Previous
- Button 4F is used for Up and Down

### Part Number Formula:

DXB-C[**row**][**column**]-[**color**]

[**row**] - Row number, **0-5**

[**column**] - Column letter, **A-K\***

[**color**] - Button color, **B** (black) or **W** (white)

Example: White PROJ Button PN# = DXB-C2D-W

\*Column "I" has been intentionally omitted